

FLUSHING INSTRUCTIONS for CONDE VAPOR OIL PUMPS

It may be necessary to flush your Conde Vapor Oil Pump to remove any gum or varnish buildup inside the pump that cause the vanes to stick in their slots. This is a simple maintenance operation and should be the first step when troubleshooting a loss of vacuum in a system.

1. Remove the oil tube at the oil reservoir.
2. Be sure the exhaust is directed away from the motor or engine.
3. Use kerosene or dry cleaning fluid for flushing process. While the pump is running under vacuum, simply insert the tube into the cleaning fluid and allow the pump to draw the fluid in. Alternately let air into the tube with the cleaning fluid. It can take up to a gallon of cleaning fluid to clean the pump.
4. In the same manner draw in about 5 ounces of oil to complete the flushing process.