



Parts Dept

45 Lynwood Dr
Trumbull, CT 06611

Tel: (800) 245-8222

Fax: (203)445-8866

Sales@partsdeptonline.com
www.partsdeptonline.com

OPERATING A BUCKET MILKER (Goats)


The following guidelines will assist the first time user in properly operating a pail type milker system.

Please note: Cow side practices and pre and post care of the animal is left solely up to the dairyman. Parts Dept. recognizes only the practices published by the National Mastitis Council, Milking Machine Manufacturers Council, and established 3A guidelines. Parts Dept. makes no claim as to the right and wrong way of using the above type of milking system. Parts Dept. only describes the function of how the piece of equipment was designed to work and has been proven to work in practical field applications. Parts Dept. will not be held accountable for any claims or damages.

Operating a pail milker requires minimal training and minimal equipment knowledge, *but does require proper equipment maintenance and the development of a special technique in applying the milking claw as opposed to hand milking or using suspended buckets.*

1. Using the 1/2" vacuum hose supplied, connect the adapter on the bucket lid to the vacuum system.
2. The vacuum supplied to the adapter on the lid supplies vacuum to both the bucket and the pulsator.
3. To always insure that a positive seal is maintained, the adapter gasket and lid gasket should always be kept clean and free of milk build up.
4. Vacuum levels to operate the bucket milker can be between 11" to 15" of mercury. Recommended levels are 14"Hg for Cows and 12"Hg for Goats. Buckets require a large volume of vacuum to completely satisfy their requirements, if vacuum levels are too low it will be harder to apply the milking unit.
5. On standard buckets set up for goats there are automatic shut off valves attached to each inflation, these valves will automatically close when there is no teat in the inflation and will automatically open once an inflation is put on a teat. For the valves to function properly the lever on the side of the valve must be in the UP position when milking. This will allow the disk inside the valve to seal against the valve body and shut off when no teat is in the inflation (Note, on all valves a small amount of air will still be drawn into the inflation when it is shut off, this is normal and necessary). To properly remove the inflation from the teat simply slip your little finger beside the teat in the inflation, this will allow air to enter the inflation breaking the vacuum seal and cause the automatic valve to shut off.
6. Cleaning of the bucket can be done both manually and CIP (Cleaned In Place). The claw can be CIP by submerging in a sink/bucket and drawing the rinse solution through the unit. This will also clean the milk hose from the claw to the bucket. The cleaning procedure of the bucket can be accomplished by using the existing solutions drawn through the claw and milk line and manually scrubbing the inside with a brush.
7. After the cleaning procedure is accomplished, the claw should be positioned so that it will drain any residual cleaning solution and the bucket should be turned upside down to ensure complete draining.
8. Inflatons should be changed regularly (for rubber inflations every 1200 milkings or sooner if damage is apparent).
9. Milk tubing and pulsation line should be replaced every year to promote sanitary conditions and maintain flexibility.
10. The pulsator should be periodically cleaned. For BRK, HEART or Interpuls pulsators this is done by submerging the pulsator in water and cleaning with a soft toothbrush style brush, Use warm soapy water (mild dish soap is fine). To dry the pulsator, place it on the bucket on let it operate on the bucket for several minuets until dry. Do not attempt to dry when freezing conditions exist. **And remember BRK, HEART and Interpuls pulsators should ever be oiled.**
11. Pulsators should be rebuilt every 2500 hours of operation. All the parts that should be replaced are available in a kit from Parts Dept. This rebuild can be performed by the dairyman requires no special skills.

Typical Bucket Set Up For Goats

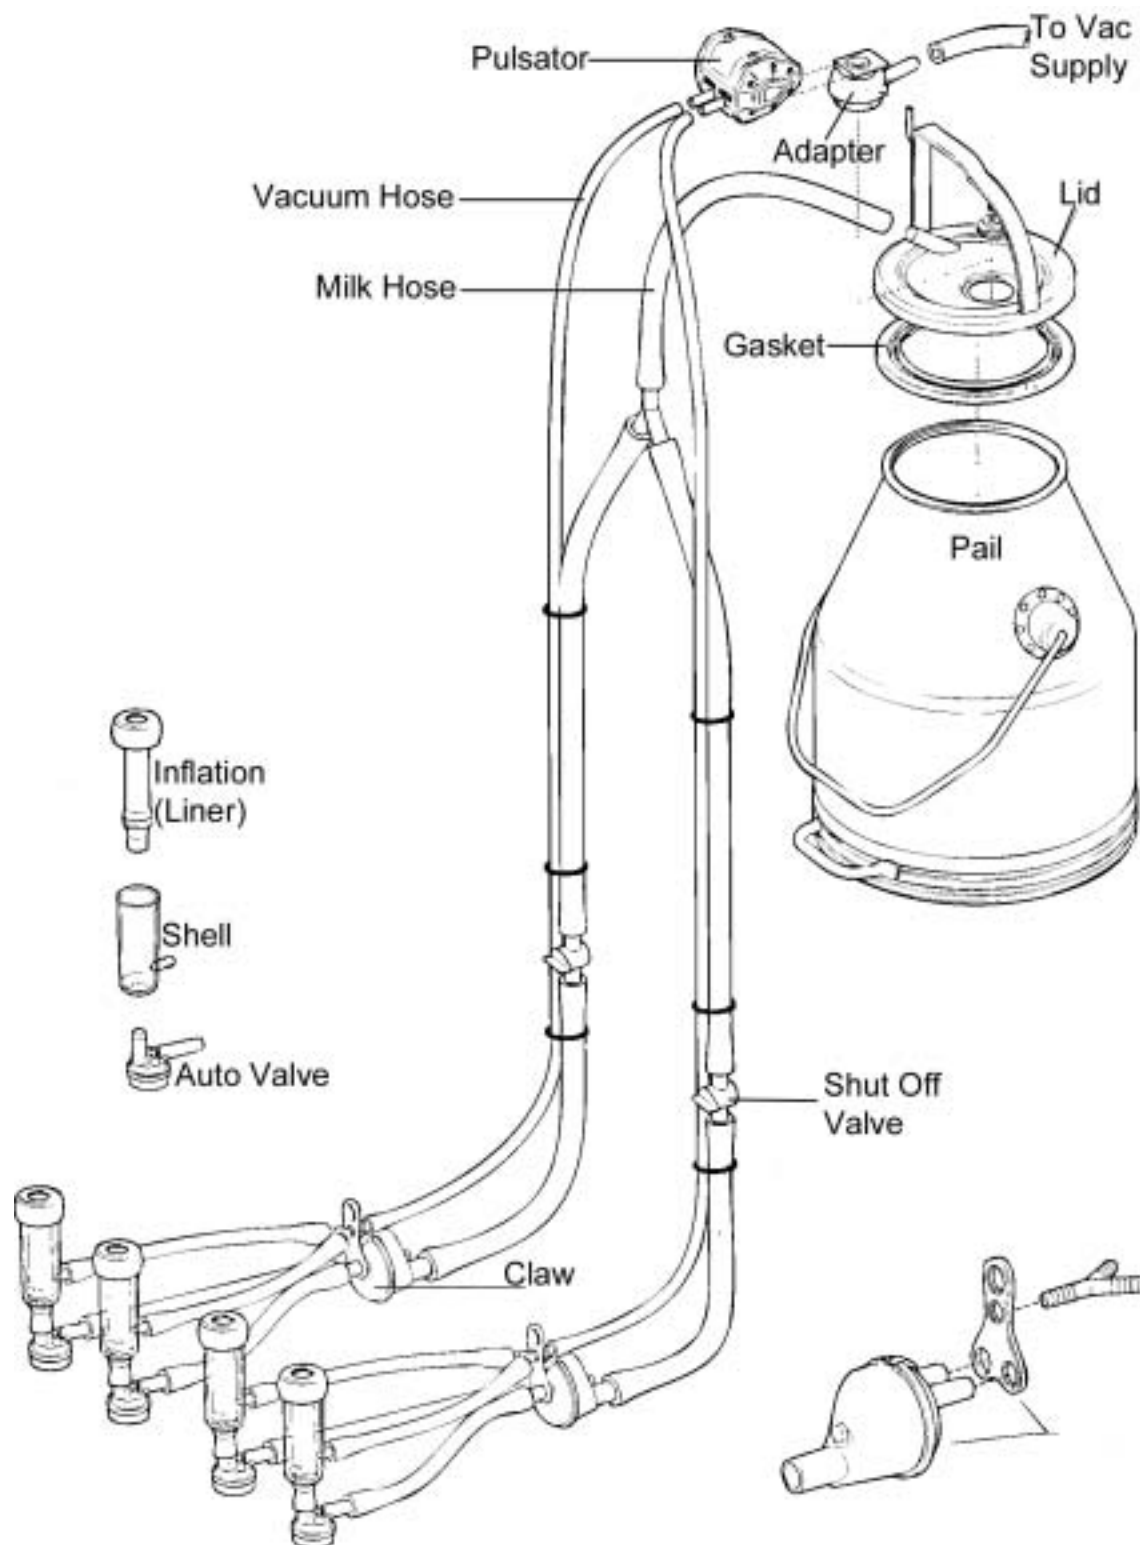

*For the purpose of this tutorial we have shown a typical bucket set up for 2 Goats
Please note Claws and Manual shut offs are optional.*